


SAMPLE + HOLD

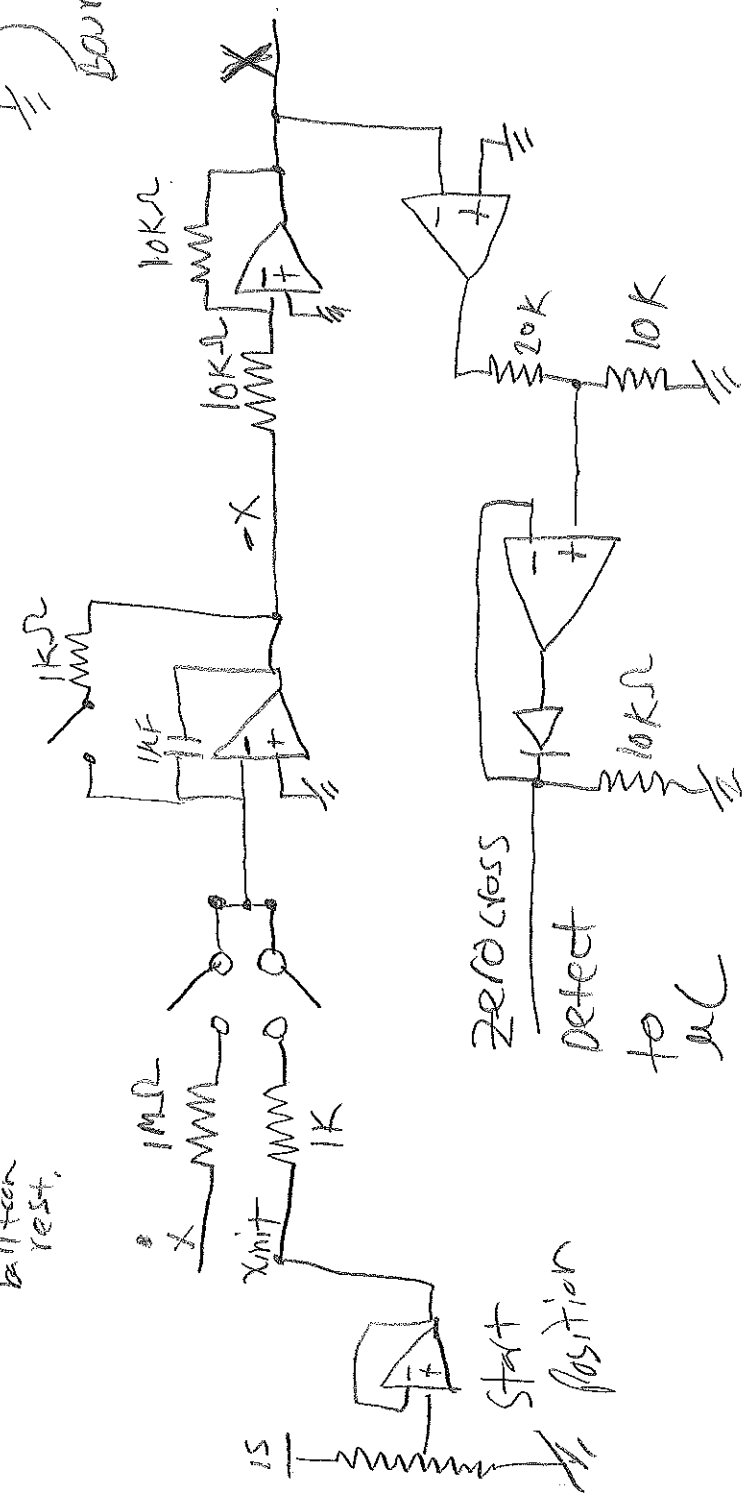

Zero cross
Detect
to uC

Start
position